


THE PROTECTOR

CO₂ REGULATOR

by
INNOVATIVE
—tool and design inc.—

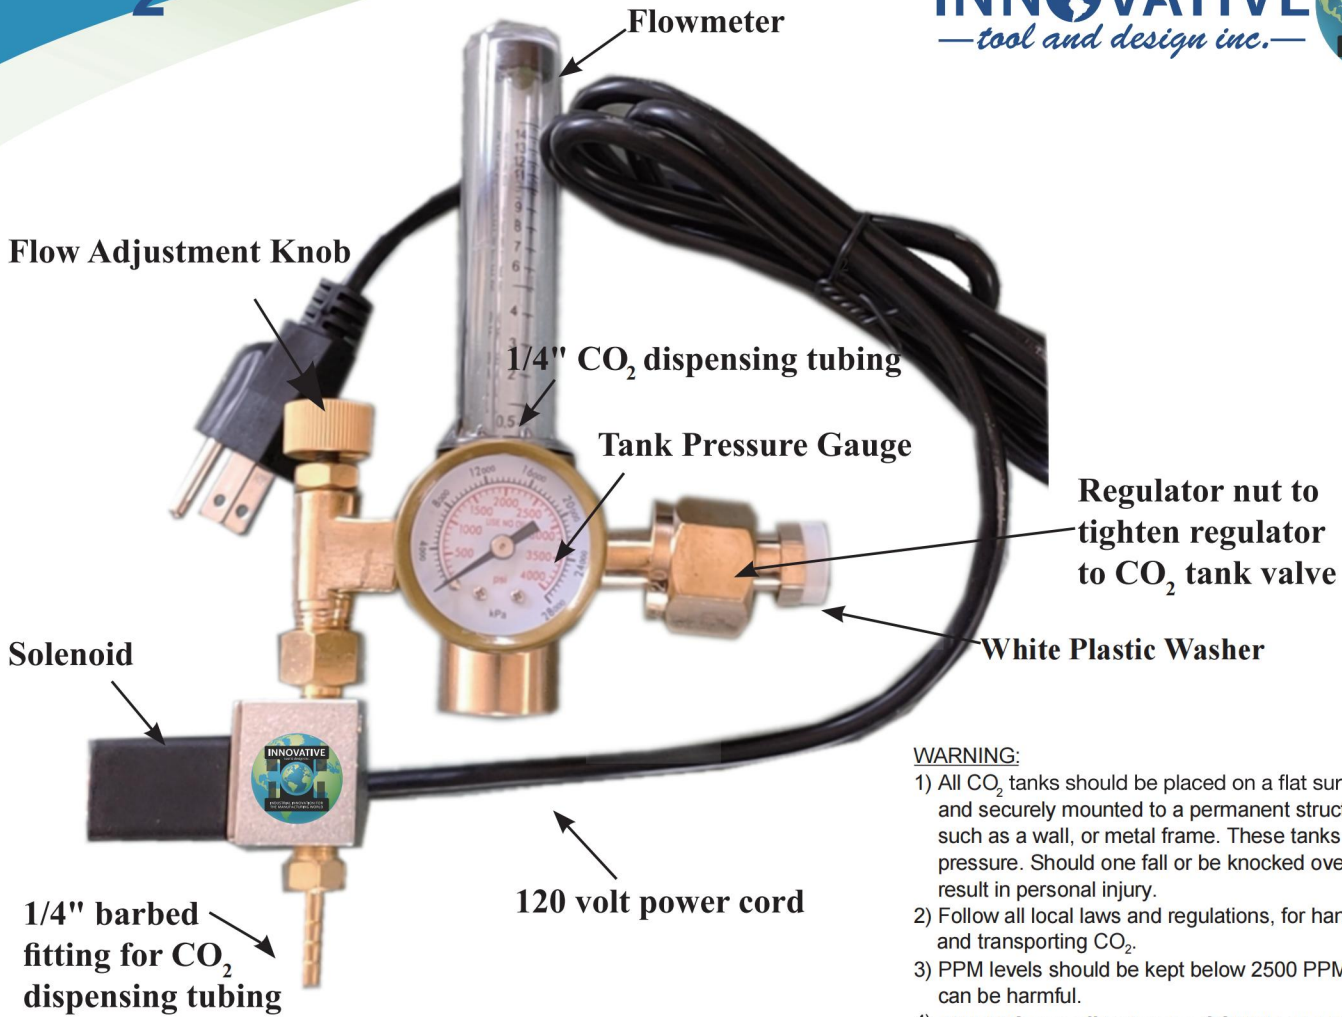

WARNING:

- 1) All CO₂ tanks should be placed on a flat surface and securely mounted to a permanent structure such as a wall, or metal frame. These tanks are under extreme pressure. Should one fall or be knocked over, may result in personal injury.
- 2) Follow all local laws and regulations, for handling, storing and transporting CO₂.
- 3) PPM levels should be kept below 2500 PPM. Levels above 5000 PPM can be harmful.
- 4) ALWAYS turn off tank valve COMPLETELY, before attaching or detaching the regulator.

1200 PPM TIMING CHART GARDEN SIZE CUBIC FEET (L x W x H)

**FLOW METER SETTINGS
CUBIC FEET PER HOUR**

CU/FT	100	200	300	400	500	600	700	800	900	1000	1200	1400	1600	1800	2000
1	7	14	22	30	36	43	50	58	65	72	87	101	115	130	144
2	4	7	11	14	18	22	25	29	32	36	43	50	58	65	72
3	2	5	7	10	12	14	17	19	22	24	29	34	38	43	48
4	2	4	5	7	9	11	13	14	16	18	22	25	29	32	36
5	1	3	4	6	7	9	10	12	13	14	17	20	23	26	29
6	1	2	4	5	6	7	8	10	11	12	14	17	19	22	24
7	1	2	3	4	5	6	7	8	9	10	12	14	17	19	21
8	1	2	3	4	5	5	6	7	8	9	11	13	14	16	18
9	1	2	2	3	4	5	6	6	7	8	10	11	13	14	16
10	NA	1	2	3	4	4	5	6	7	7	9	10	12	13	14
11	NA	1	2	3	3	4	5	5	6	7	8	9	11	12	13
12	NA	NA	2	3	3	4	4	5	5	6	7	8	10	11	12
13	NA	NA	2	2	3	3	4	4	5	6	7	8	9	10	11
14	NA	NA	2	2	3	3	4	4	5	6	6	7	8	9	10
15	NA	NA	1	2	2	3	3	4	4	6	6	7	8	9	10

